

Innovative Mobile Masker™ Assembly Instructions

P/N I-MM




1
Install Total-Lock wheels onto base leg P/N 750-040.



2
Install upright supports onto base leg P/N 750-041. Do not tighten any bolts until all parts are assembled.




3
Assemble Roll Paper Support P/N 750-012 and Tear Blade Support P/N 750-011 onto Cross Support Tubes P/N 750-010. Install Tear Blades.

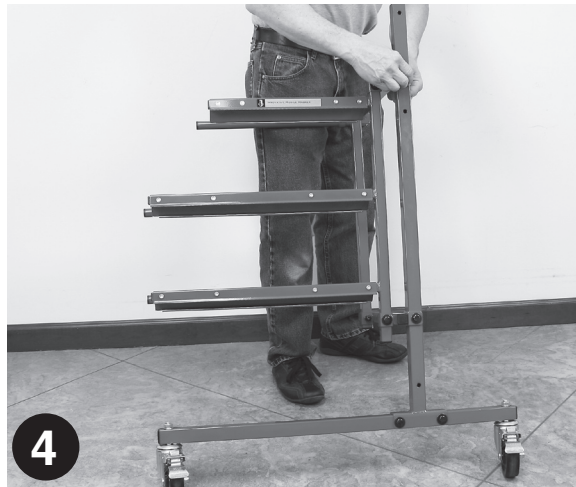

4
Install Cross Support Tubes P/N 750-010 onto upright supports. Note second open thru-hole from bottom.



5
Tighten all bolts.

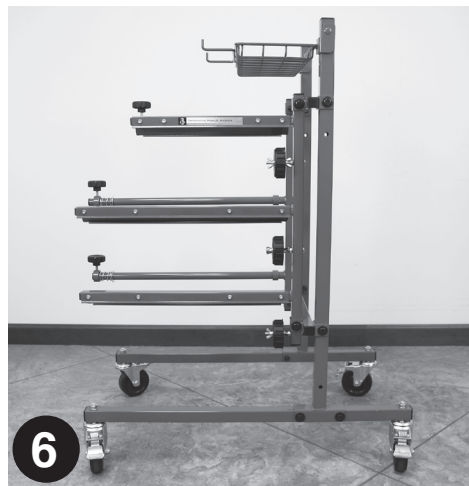

6
Install Tape Hub Assembly, Fender Washer, Tension Spring, Collar and Plastic Knob (see diagram 1).

Innovative Mobile Masker™

www.innovativetools.com

P/N I-MM

Roll Paper Support
750-012 Qty: 1

Tension Spring
750-014 Qty: 3

Plastic Knob
250-026 Qty: 3

Fender Washer
750-013 Qty: 3

14" Guide Spring
750-018 Qty: 1

Collar
750-016 Qty: 3

14" Tear Blade
750-017 Qty: 1

20" Guide Spring
750-020 Qty: 2

20" Tear Blade
750-019 Qty: 2

5/16" x 1/2" Self-Tapping Screw
Qty: 12

Tape Hub
750-000 Qty: 3

Cross Support Tube
750-010 Qty: 2

Tear Blade Support
750-011 Qty: 1

3/8" Hex Head Bolt
Qty: 8

Tape Hub Hardware Kit
Qty: 3

Upright Support
750-041 Qty: 2

Large Basket with Tape Hooks 750-042
Qty: 1

Base Leg
750-040 Qty: 2

Total-Lock Caster Wheel 4TLCW
Qty: 4

