



Innovative Mobile Bumper™

Assembly Instructions

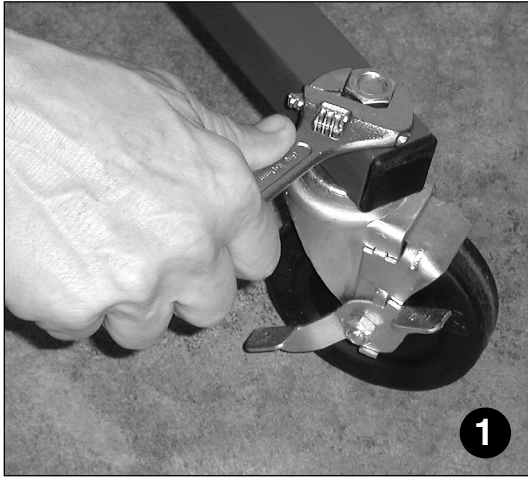

Install wheels to leg support tubes.

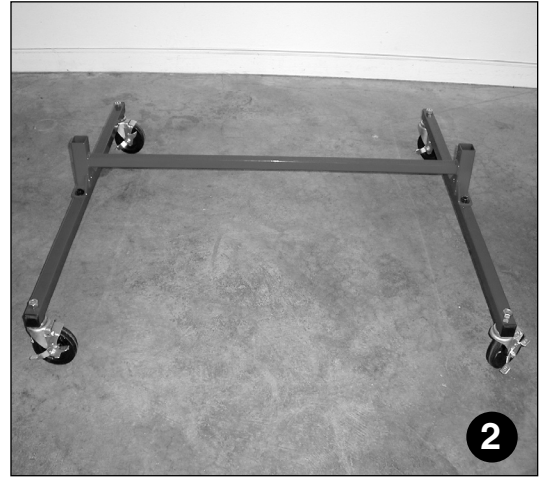

Bolt leg support tubes to lower frame support.



Slide longer side rail tubes (P/N 290-005) into lower base support, insert bolts. *Note: do not tighten bolts until frame is completed.*



Install center frame support and last two side rail tubes (P/N 290-026).




Install upper frame support, then tighten all bolts.



Put support arms in desired positions. *Note: the four longer support arms are normally in the topmost positions.*

Innovative Mobile Bumper™

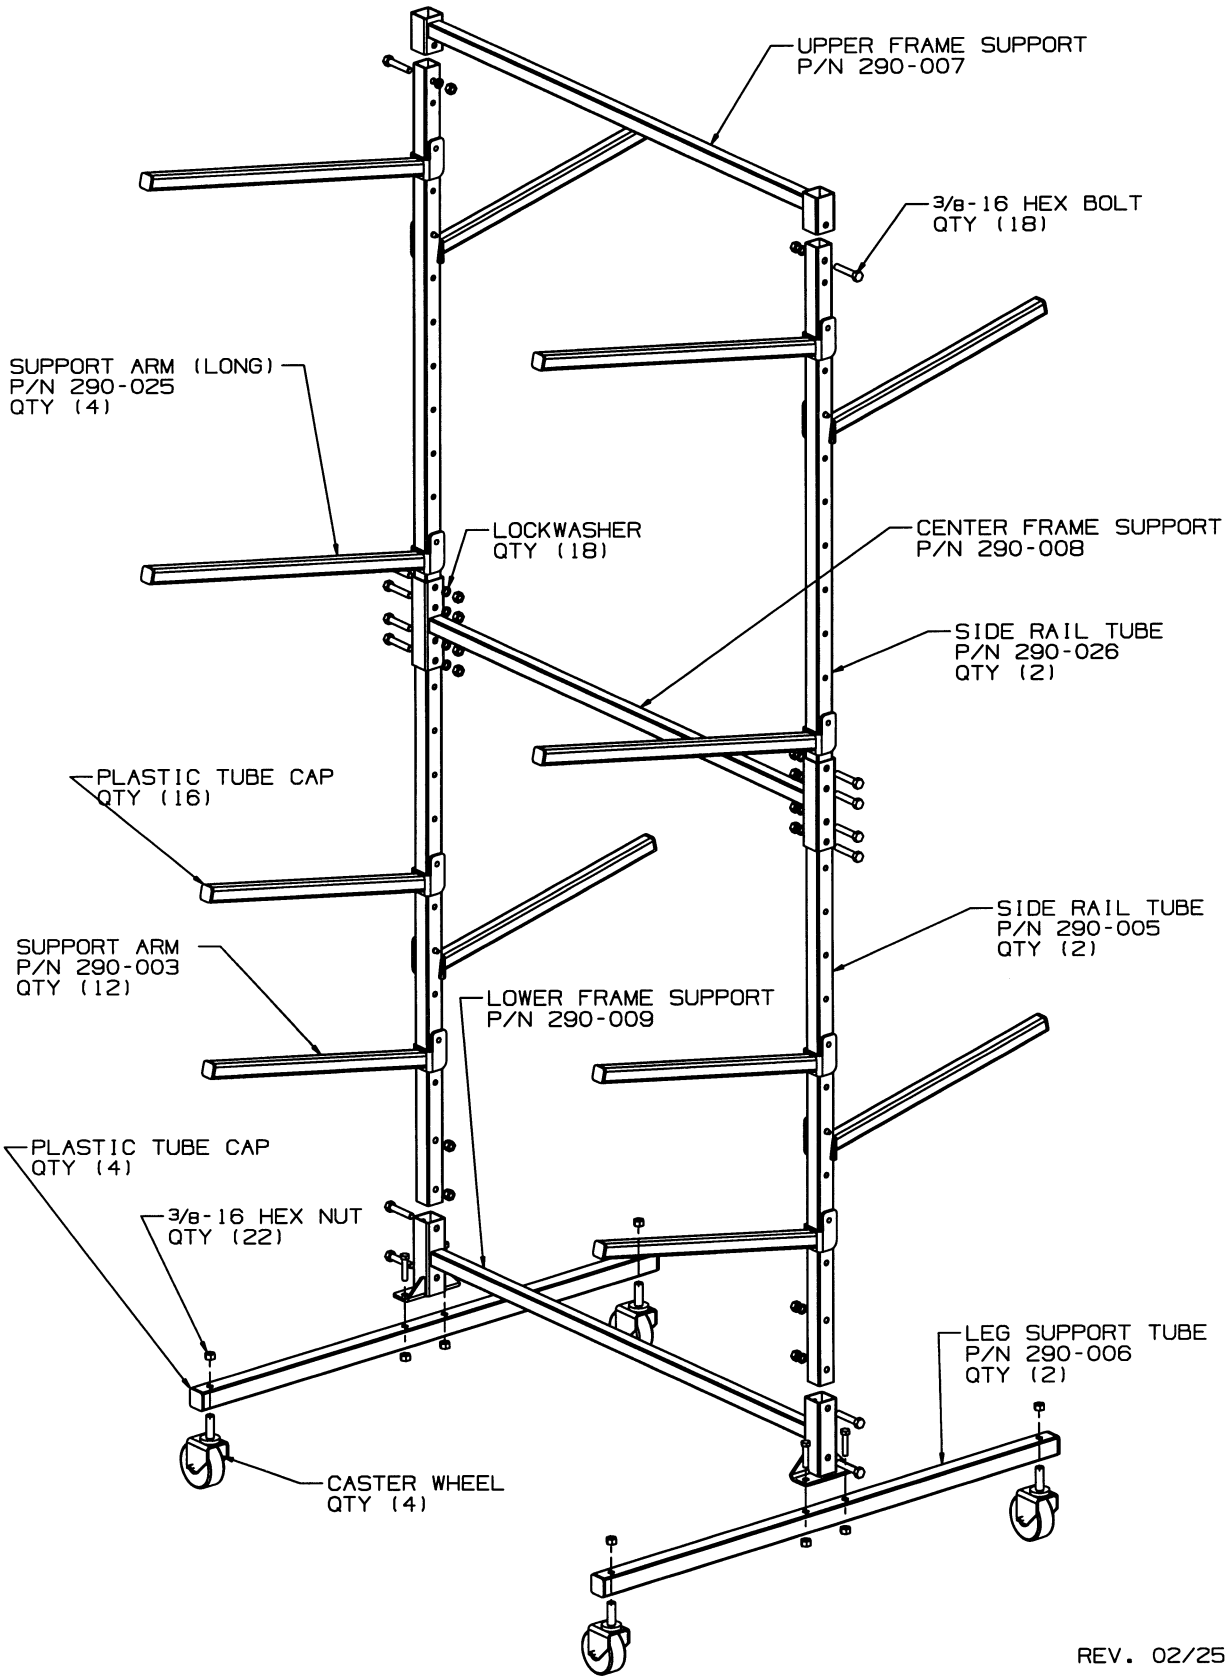

REV. 02/25/2005