
Innovative Parts Cart D™

Assembly Instructions




Bolt caster wheels to leg support tubes.

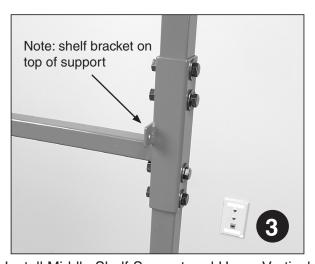


Install Middle Shelf Support and Upper Vertical Support as shown.



Install Shelves using 1/4" bolt with flat washer on outer side and 1/4" lock nut on inside. After assembly is complete, fully tighten all bolts.

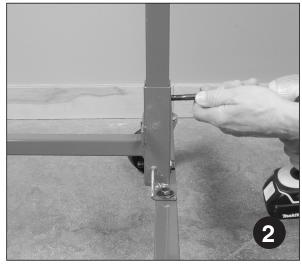

Install Lower Shelf Support and Lower Vertical Support.
Bolt holes are very tight by design to prevent movement. Use impact to insert bolts. **Do not fully tighten**bolts until cart is fully assembled.

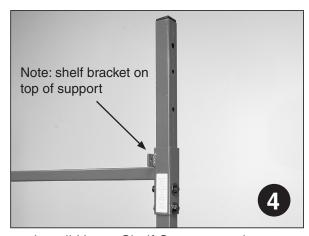

Install Upper Shelf Support as shown.

Visit innovativetools.com for new products, product videos, assembly instructions and more.

See how we can help make your shop more efficient.

Innovative Parts Cart D™

P/N SSPC-D

