


Innovative Panel-Cart™

Assembly Instructions

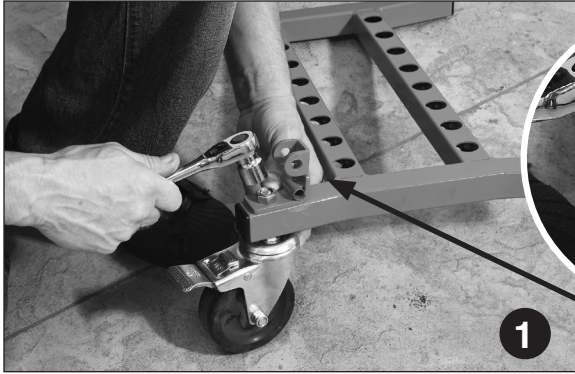


1

Insert Total-Lock Caster Wheel P/N 440-010 into frame support P/N 440-012. Install leg connector P/N 440-013 onto caster wheel stem. Install 3/4" caster wheel nut. Leave wheel nuts loose for now.



Note
position
of leg
connector

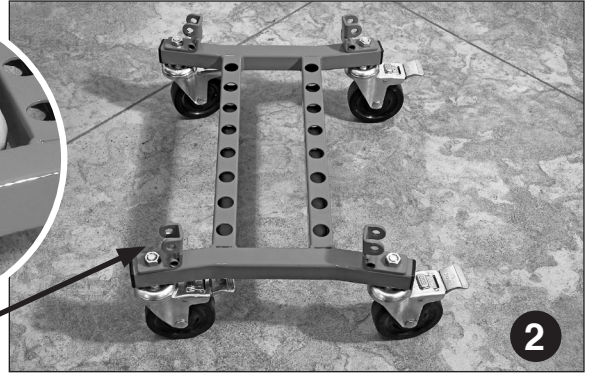


2

Note Total-Lock Caster Wheels P/N 440-010 and position of Leg Connectors P/N 440-013.




3

Install non-locking caster wheels onto cart legs.

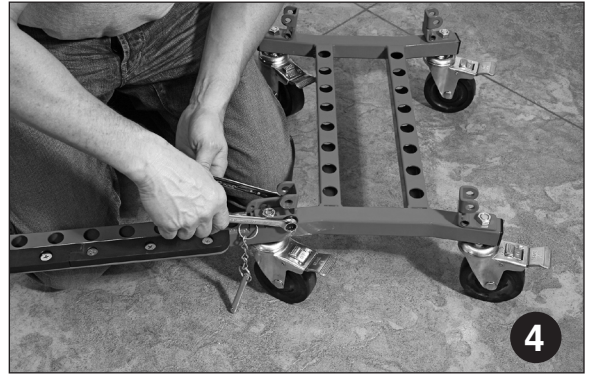

4

Install Cart Legs onto Leg Connectors using 3/8" bolts. Do not over-tighten. Note rubber pads are toward outside of cart.

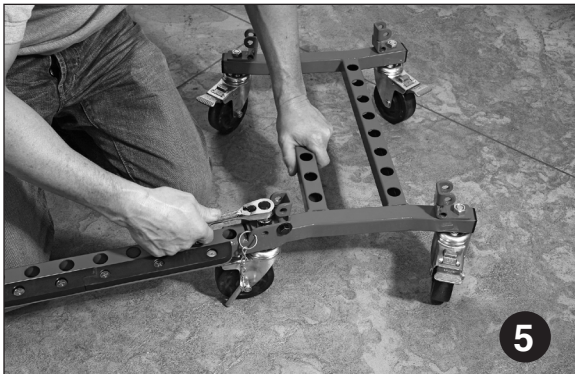

5

Tighten 3/4" nut securely with leg in downward position.



6

Insert Support Posts P/N 440-016 into Frame Support.



7

Use Quick-Release Pin to secure Cart Legs in upright position.



Innovative Panel-Cart

www.innovativetools.com

