
Innovative Parts Cart C™

Assembly Instructions


Step 1:Remove all shelves and support arms from SuperStorage Parts Cart "B" Series.



Remove right side "B" Series leg support tube. Transfer wheels to "C" Series leg support tube. Fasten "C" Series leg support tube to frame. Repeat for left side.

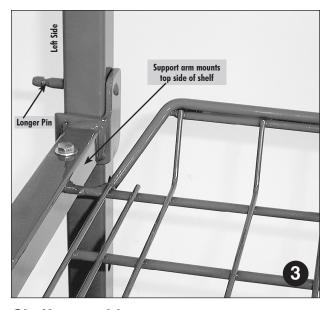

Shelf assemblyPut longer pin on the left side of all shelves.

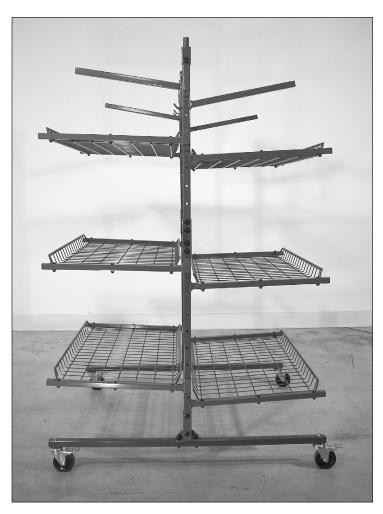

Put shelves and support arms in desired position. Note: always keep heavier objects on bottom shelves.

Option "C" Part List

- 2 Leg Support Tubes (P/N 290-027)
- 3 Support Arms (P/N 290-019)
- 3 Support Arms (P/N 290-021)
- 3 Baskets (P/N 290-014)
- 2 Support Arms (P/N 290-003)
- 1 Hardware Kit

