


Innovative Superstand 6™


Assembly Instructions



Install Support Tubes. Install support tube to frame using 1½" bolts with washer and nuts.

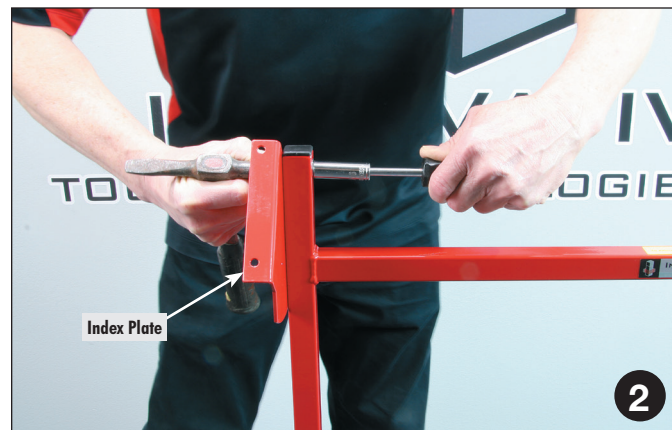

Install Index Plate. Use a 7/16 socket to slide push clip onto the index plate rivet.

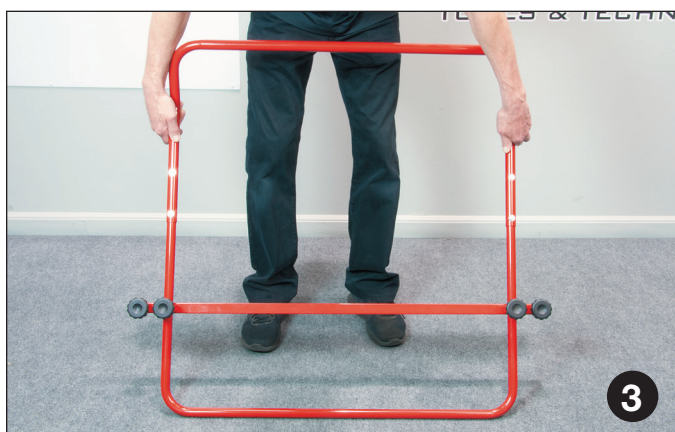


Cradle Assembly. Slide cross-tube into handrail, tighten knobs. Then slide handrail into cradle tube **only** to first hole. Insert four 1½" bolts with washer only.



Turn the index plate to the upright position. Mount cradle tube assembly to frame (as shown). Install nuts and tighten.




Mounting Foam Pad. Electrical tape can be used to better secure the foam pad to the upper cradle tube as shown (tape both ends and middle).

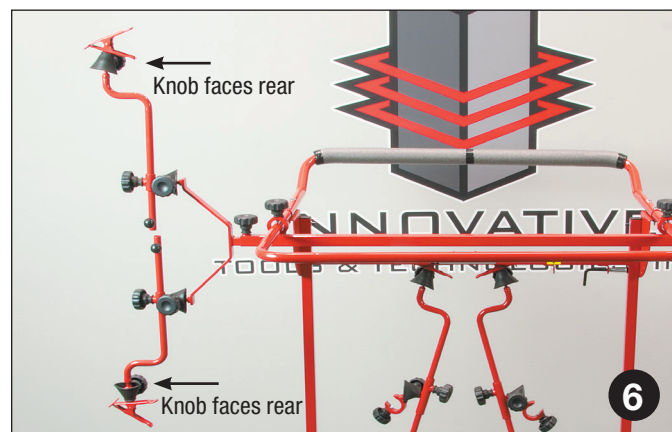

Install Support Arms. Slide support arms into cross-tube. Insert rubber sleeves and tighten plastic knobs. **Note:** there are right and left arms. Install so that the knobs face the rear of the Superstand 6 (as shown).

Innovative Superstand 6™

P/N SS-6

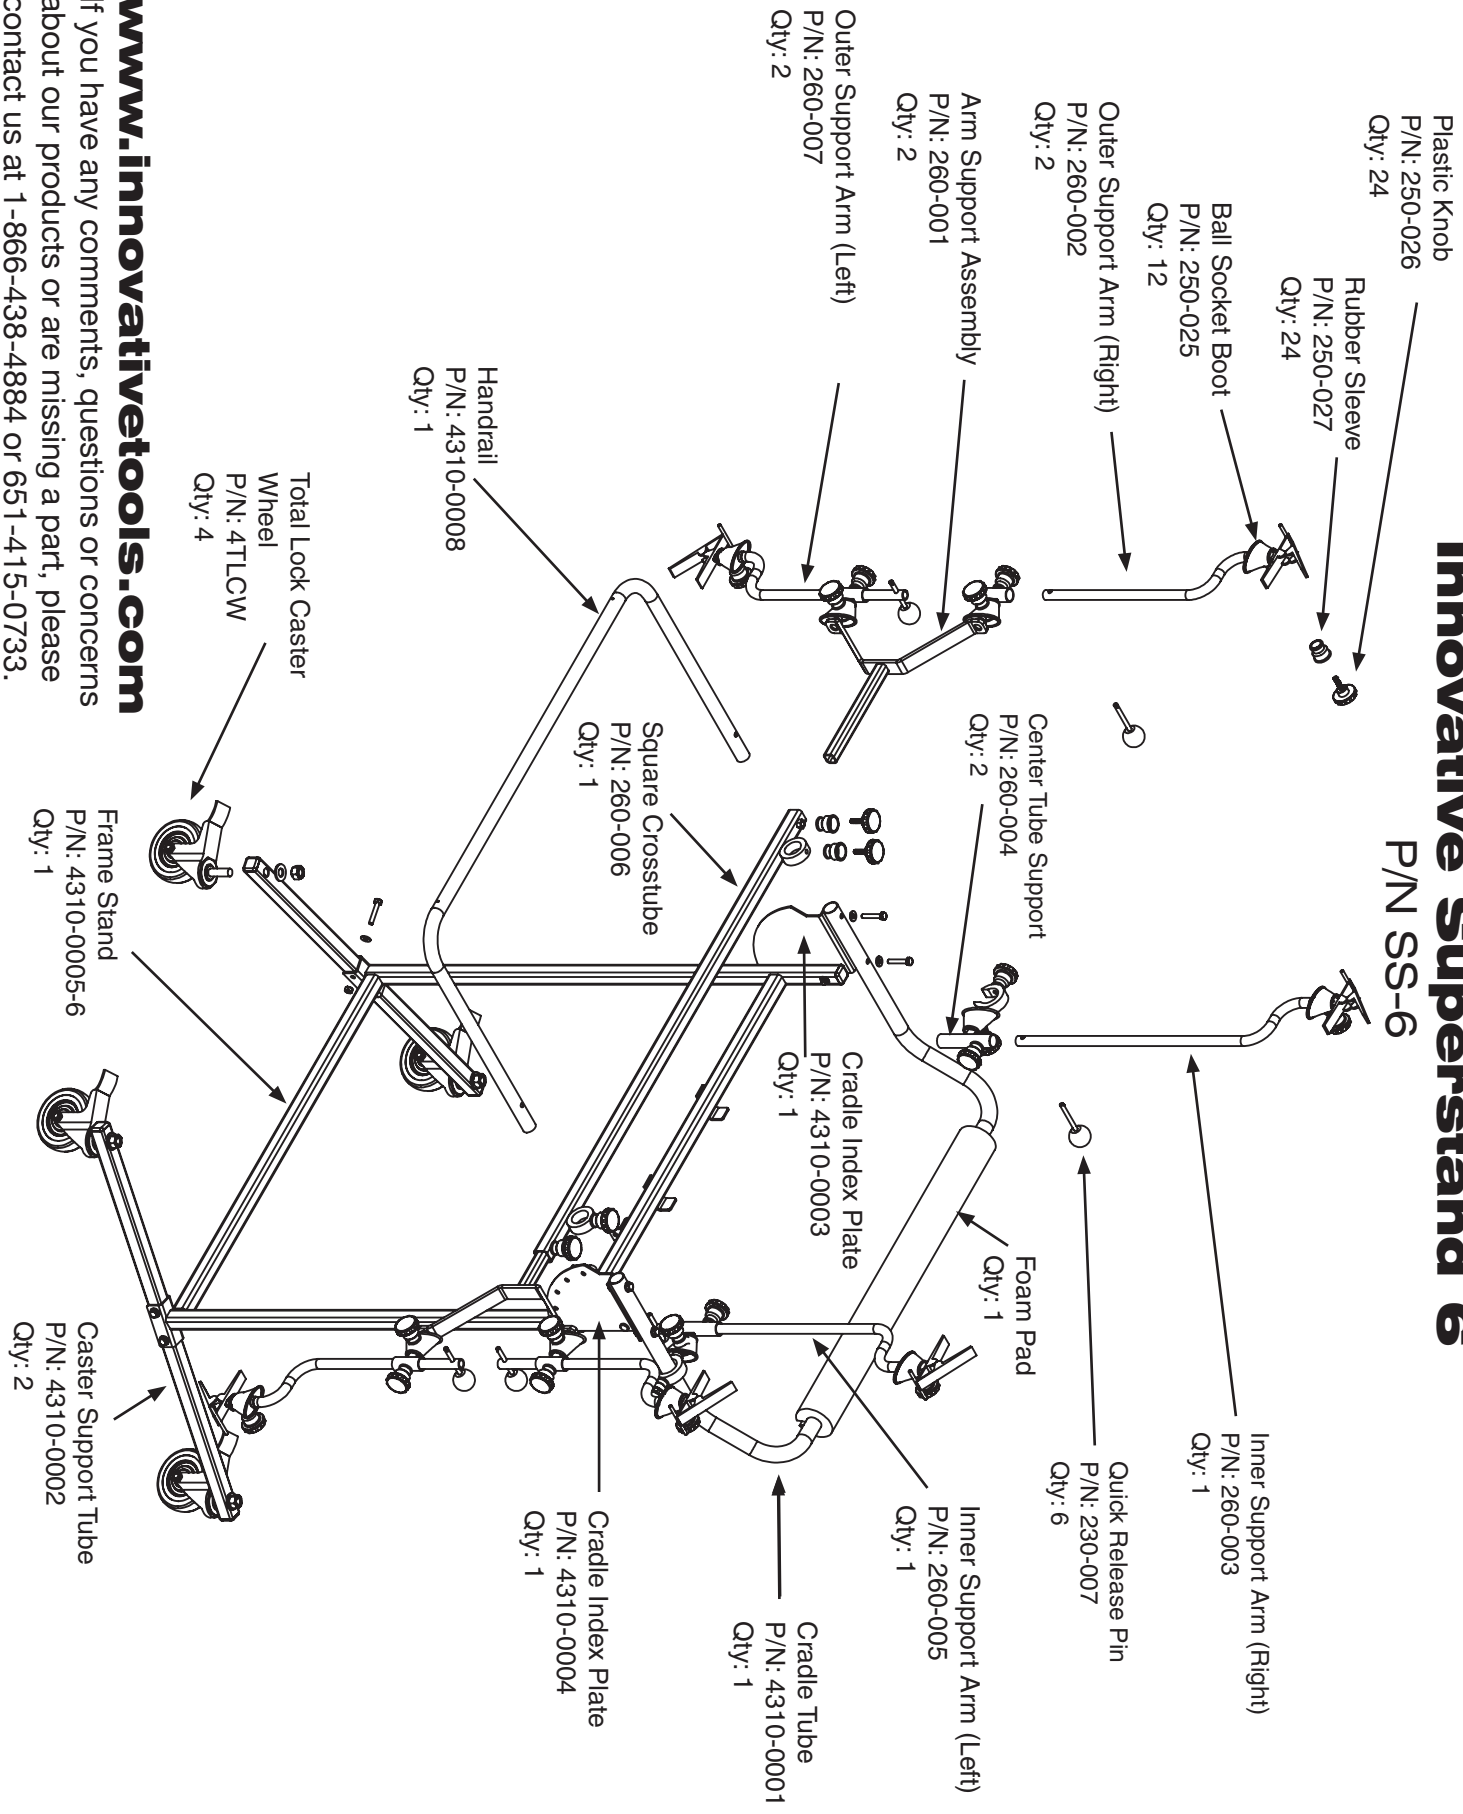

www.innovativetools.com

If you have any comments, questions or concerns about our products or are missing a part, please contact us at 1-866-438-4884 or 651-415-0733.