


Tips for Keeping Your Masker Blades Sharp

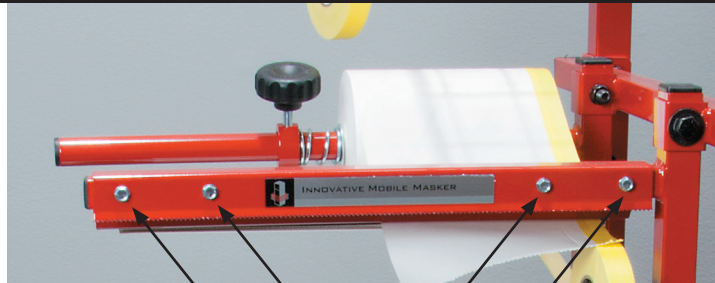


Step one: Remove four screws using a 5/16 inch socket

Step two: Grind back edge of blade using 50 grit grinding disc



Innovative Mobile Masker (Part # I-MM) is shown.
This technique applies to all Innovative Tools masker blades.

Finished edge should look as shown

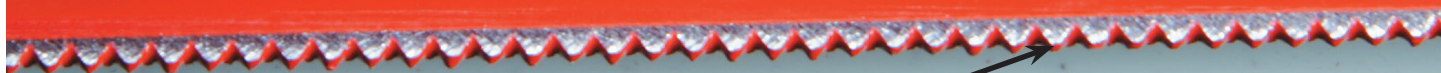

Around 1/16 inch

U.S. :: 1-866-438-4884 DIRECT :: 1-651-415-0733

FOR MORE INFORMATION, CONTACT YOUR LOCAL JOBBER OR FIND ONE ONLINE BY VISITING

WWW.INNOVATIVETOOLS.COM



INNOVATIVE
TOOLS & TECHNOLOGIES, INC.